

## FM-02 FLUSH MOUNT KIT INSTALLATION

### *How to install the flush mount kit.*

1. Cut out the dash board using a template included in the package.
2. Prepare + screw driver and pliers for mounting the kit.
3. Put the longer screw to the hole of the plastic mount block. Attach the nut about 5 mm inside from the tip of the screw. (See Fig. 1)
4. Fix the plastic mount block to the side of radio using shorter screw. Don't forget to attach the washer. (See Fig. 2)
5. Attach the bolt foot to the tip of the screw. Hold the nut with the pliers and turn the + screw driver clockwise. (See Fig. 3)
6. The nut to be set inside the plastic mount block and confirm if the bolt foot is firmly set. (See Fig. 4)
7. The same works to be done for the other side.

Fig. 1

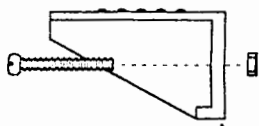


Fig. 2

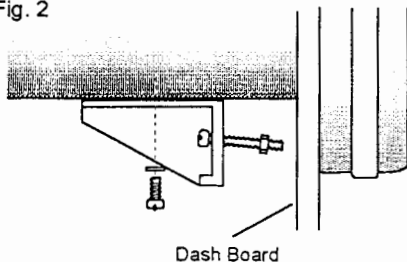


Fig. 3

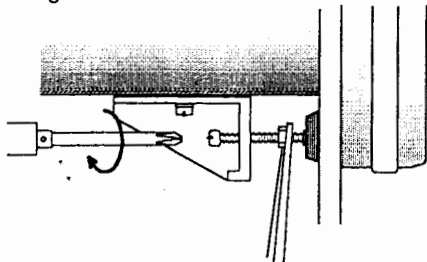


Fig. 4

